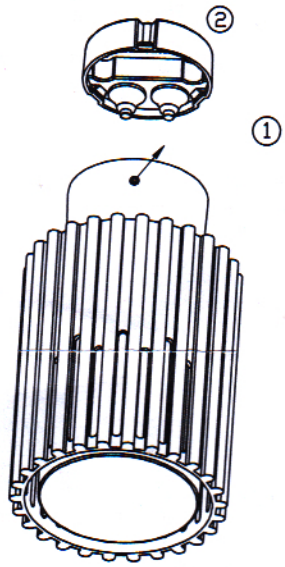
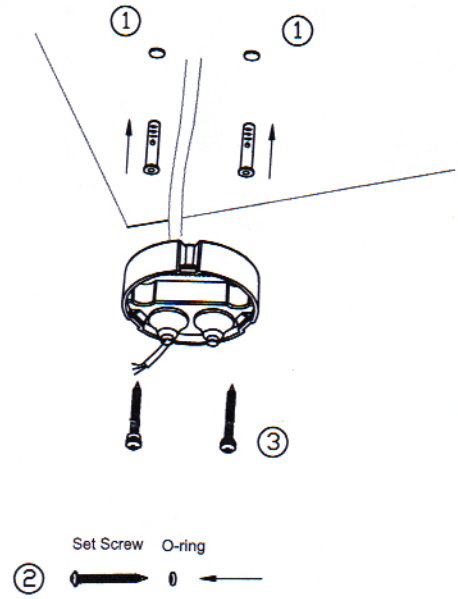
## 1



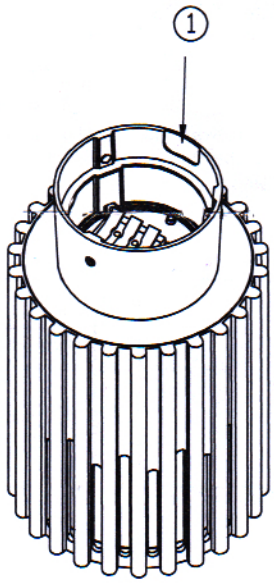

1.Loosen the fastening screw by turning it counterclockwise.
2.Remove the mounting base plate.

## 2



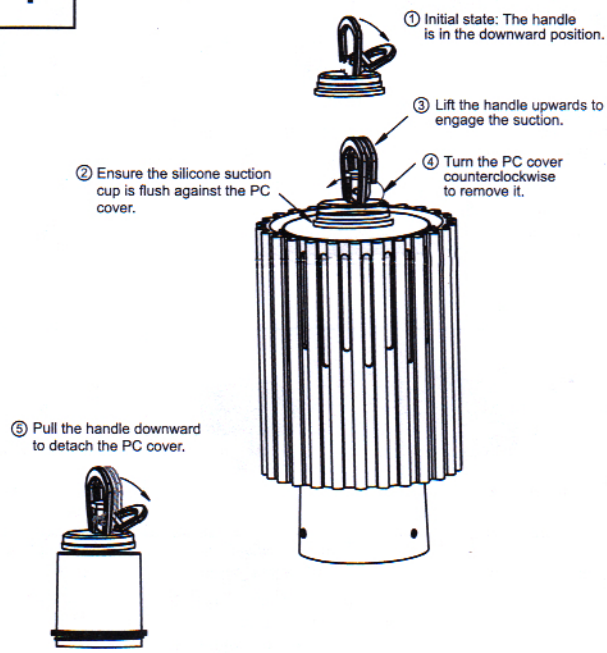

1.Drill holes for the mounting base plate screws in the wall, and insert the plastic wall plugs.
2.Slide the O-ring onto the M4x30 self-tapping screw.
3.Pass the power cable through the waterproof grommet on the base plate, and then secure the base plate with the screws.

## 3




1.Use a power drill or other tool to remove the knockout holes.
(Note: Removal of knockout holes depends on customer requirements.)

## 4



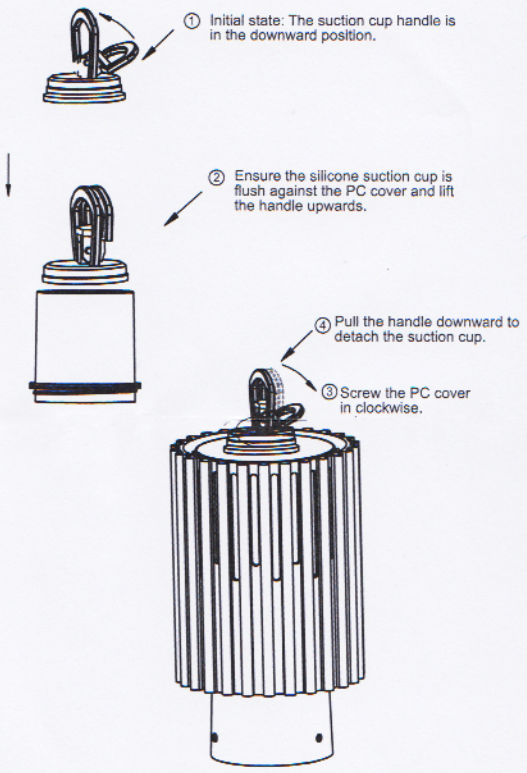

1.Use the suction cup to remove the upper and lower PC covers by turning them counterclockwise.

## 5



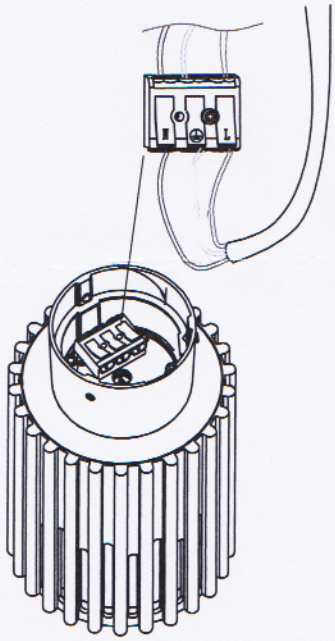

1.Screw in the desired bulb clockwise.

## 6



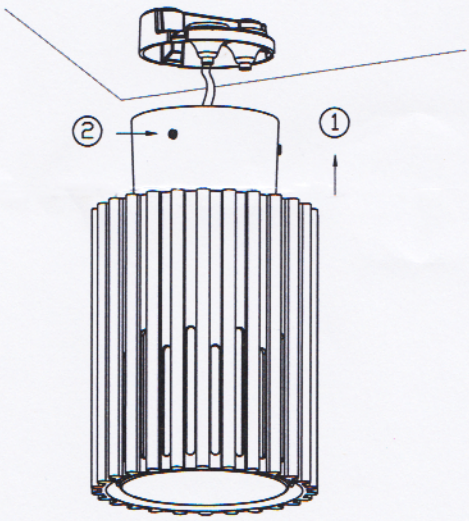

1.Use the suction cup to screw the PC cover in clockwise

## 7



1.Insert the power supply wires into the designated push-in terminal blocks.

## 8




1.Insert the entire light fixture into the mounting base plate.
2.Tighten the screw clockwise.